



The DFP Super Clamp is the most versatile reel clamp on the market. Engineered to accommodate both baitcasters and conventional reels, the Super Clamp can be mounted on nearly any deckhand rod, including the fat butt Ulua.

Precision machined out of billet aircraft grade 6061 Aluminum, and 100% made in the USA. Using state of the art CNC milling machines we take the block of aluminum and using various carbide cutters we bring the clamp to life.

### DFP Super Clamp Fitment

Rod Diameter 1" inch (25.4 MM)- 1 1/2 (38MM)

**Shimano:** Torium 14-50, Trinidad 12-50, Trinidad A 12-50, Calcutta 400-700, Tranx 400-500, Talica 8-20, Tyronos 20-30

**Daiwa:** Saltiga 15-50, Saltist 15-50, Seagate 20-50, Lexa 400

**Okuma:** Komodo 463, Komodo 471

**Penn:** Torque 15-40, Fathom 15-50, Squall 15-40, Warefare 15-30

**Avet:** JX,HX,LX

**Accurate:** Valiant 400-600, Tern 400-600, Boss 400-600, Dauntless 400-600, Fury 400-600

\*Does not fit narrow framed Reels\*

\*Does not fit Newell's or Avet SX/MX\*

**What's Included:** 1x Super Clamp assembly, 2x #6-32 1/2, 2x #8-32 3/4, 2x #8-32 1", 2x #8-32 1 1/8", 1x 9/64 Hex Key, and 1x 5/64 Hex Key



Patent Pending




## Installation Instructions:

Ensure the rod diameter is between 1" inch (25.4 MM)- 1 1/2 (38MM)




**Step 1:** Mount the clamp to the rod by fastening with the provided screws as shown in the diagram to the right. Ensure screws "A" and screws "B" remain slightly loose.

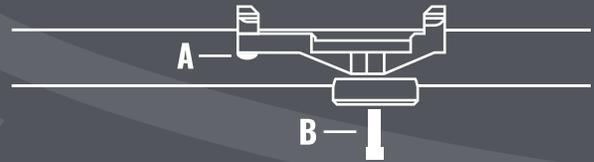


**Step 2:** Set the reel on the rod and position the rear reel seat beneath the fixed crossbar of the clamp.



**Step 3:** Slide the adjustable crossbar over the front of the reel seat as close to the reel as possible. Tighten screws "A" evenly. Then align the assembly with the rod guides and tighten screws "B" evenly. Be sure not to over tighten.

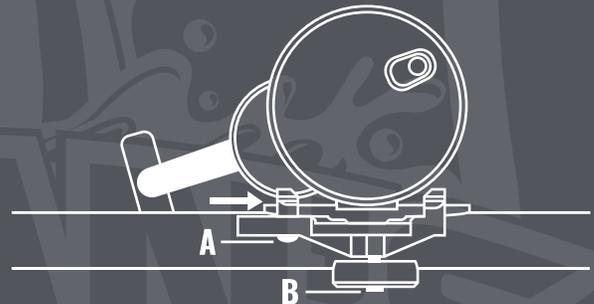

**Alternate Install:** Some reel seats may be too long to slide beneath both crossbars. In these cases, remove screw "B" while leaving Screw "A" loose. Swing the adjustable crossbar as shown and place reel seat beneath the rear crossbar. Then swing the adjustable crossbar over the front of the reel seat and reinstall screw "B". Then attach assembly to rod as shown in Step 2.

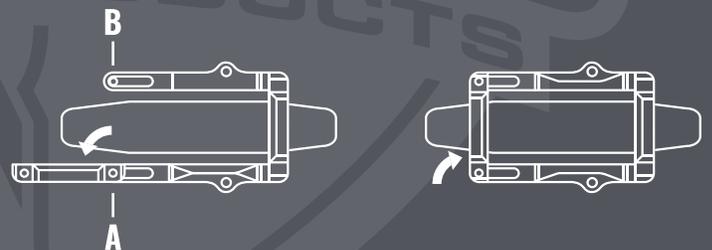

A detailed installation video is viewable on our website

